





Leading the way in self testing emergency lighting

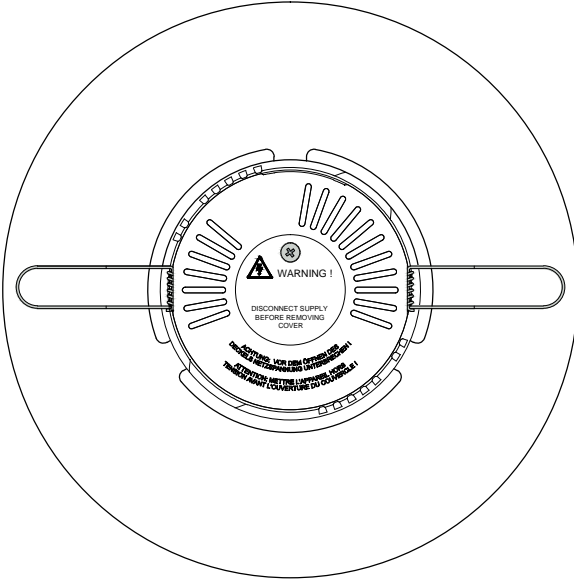

**Installation Instructions for
Recess Mounted Quatrum Range
Ceiling Tile Protector**




Leading the way in self testing emergency lighting

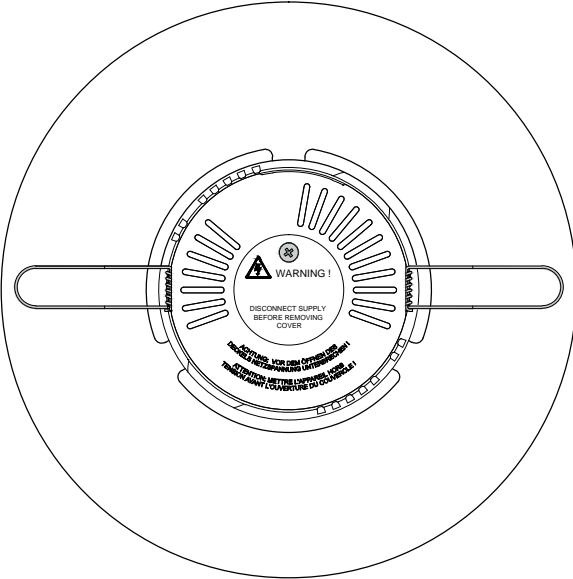

**Installation Instructions for
Recess Mounted Quatrum Range
Ceiling Tile Protector**



Leading the way in self testing emergency lighting

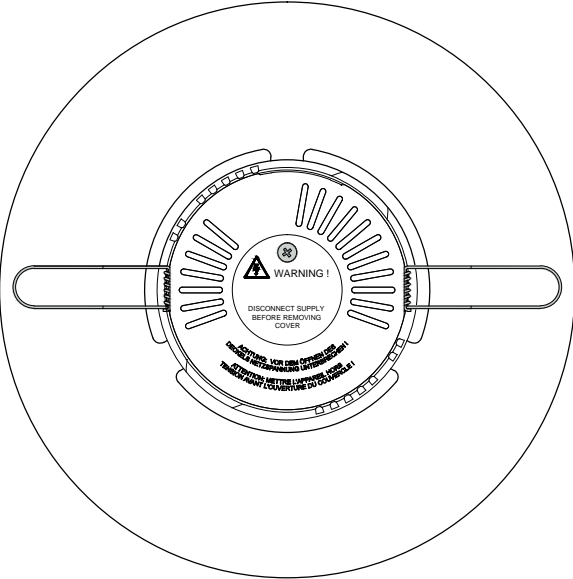

**Installation Instructions for
Recess Mounted Quatrum Range
Ceiling Tile Protector**



1 Ceiling Tile Cutting

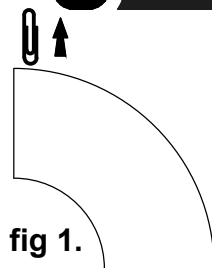


fig 1.

1. Follow Step 1 in the Installation and Operating Instructions for Recessed TriLED/QuadLED and MonoLED (F1S006). Once complete remove the Ceiling Tile Protector from the box and remove the retainer clip (See fig 1).

2 Fixing Ceiling Tile Protector

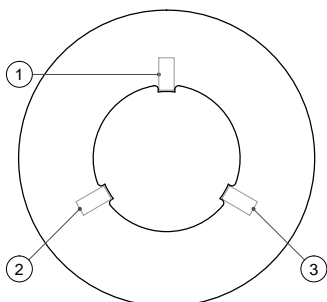


fig 2.

2. Fold out the Ceiling Tile Protector flat and remove the transfer paper on the x3No. sticky pads (See fig 2).

Next, fold the ceiling tile protector in half ensuring that the sticky pads are on the outside. Then feed it through the cut hole and let it spring over in the ceiling void. (See fig 3a) **NOTE:** Ensure that when the ceiling tile protector springs flat, that the sticky pads

are facing down towards the ceiling surface.

Position into place ensure that the holes line up, and push down in the location of the sticky pads to secure in place .



fig 3b.

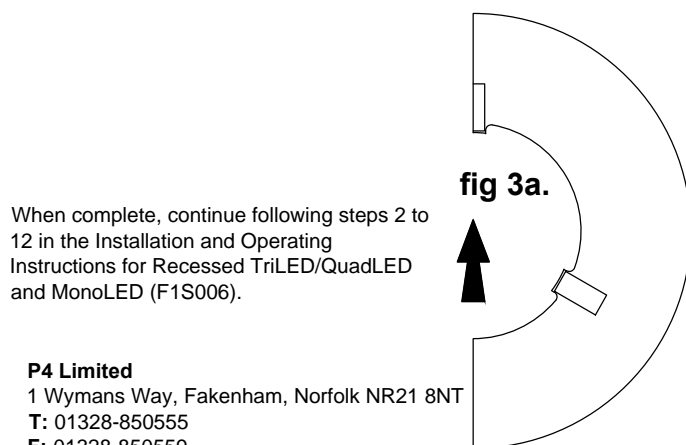


fig 3a.

When complete, continue following steps 2 to 12 in the Installation and Operating Instructions for Recessed TriLED/QuadLED and MonoLED (F1S006).

P4 Limited

1 Wymans Way, Fakenham, Norfolk NR21 8NT
T: 01328-850555
F: 01328-850559
E: info@p4fastel.co.uk
www.p4fastel.co.uk



2013 copyright all rights reserved

Details correct at time of publication P4 reserve the right to change specification at any time.

1 Ceiling Tile Cutting

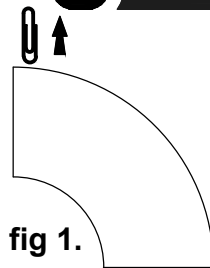


fig 1.

1. Follow Step 1 in the Installation and Operating Instructions for Recessed TriLED/QuadLED and MonoLED (F1S006). Once complete remove the Ceiling Tile Protector from the box and remove the retainer clip (See fig 1).

2 Fixing Ceiling Tile Protector

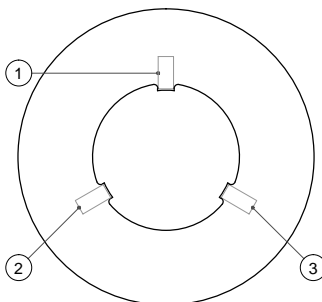


fig 2.

2. Fold out the Ceiling Tile Protector flat and remove the transfer paper on the x3No. sticky pads (See fig 2).

Next, fold the ceiling tile protector in half ensuring that the sticky pads are on the outside. Then feed it through the cut hole and let it spring over in the ceiling void. (See fig 3a) **NOTE:** Ensure that when the ceiling tile protector springs flat, that the sticky pads

are facing down towards the ceiling surface.

Position into place ensure that the holes line up, and push down in the location of the sticky pads to secure in place .



fig 3b.

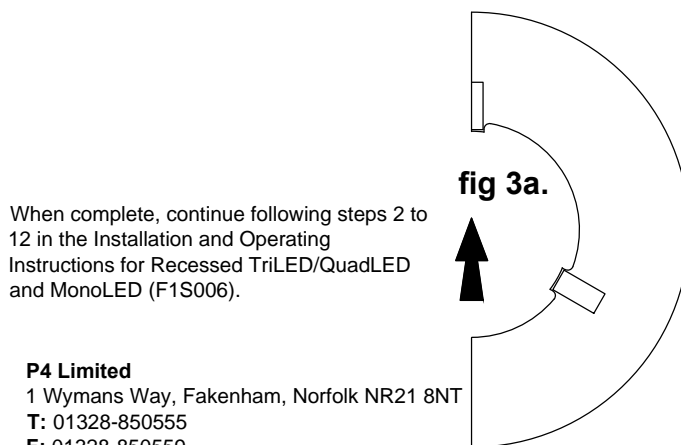


fig 3a.

When complete, continue following steps 2 to 12 in the Installation and Operating Instructions for Recessed TriLED/QuadLED and MonoLED (F1S006).

P4 Limited

1 Wymans Way, Fakenham, Norfolk NR21 8NT
T: 01328-850555
F: 01328-850559
E: info@p4fastel.co.uk
www.p4fastel.co.uk



2013 copyright all rights reserved

Details correct at time of publication P4 reserve the right to change specification at any time.

1 Ceiling Tile Cutting

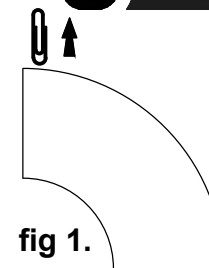


fig 1.

1. Follow Step 1 in the Installation and Operating Instructions for Recessed TriLED/QuadLED and MonoLED (F1S006). Once complete remove the Ceiling Tile Protector from the box and remove the retainer clip (See fig 1).

2 Fixing Ceiling Tile Protector

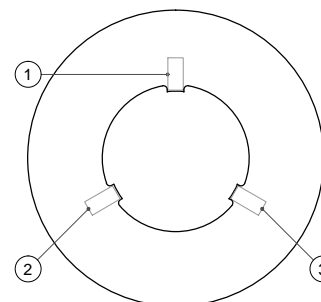


fig 2.

2. Fold out the Ceiling Tile Protector flat and remove the transfer paper on the x3No. sticky pads (See fig 2).

Next, fold the ceiling tile protector in half ensuring that the sticky pads are on the outside. Then feed it through the cut hole and let it spring over in the ceiling void. (See fig 3a) **NOTE:** Ensure that when the ceiling tile protector springs flat, that the sticky pads

are facing down towards the ceiling surface.

Position into place ensure that the holes line up, and push down in the location of the sticky pads to secure in place .



fig 3b.

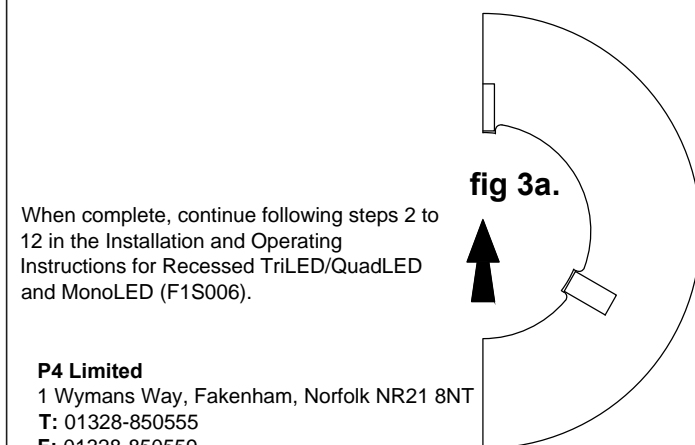


fig 3a.

When complete, continue following steps 2 to 12 in the Installation and Operating Instructions for Recessed TriLED/QuadLED and MonoLED (F1S006).

P4 Limited

1 Wymans Way, Fakenham, Norfolk NR21 8NT
T: 01328-850555
F: 01328-850559
E: info@p4fastel.co.uk
www.p4fastel.co.uk



2013 copyright all rights reserved

Details correct at time of publication P4 reserve the right to change specification at any time.